


Step 3. Replace the internal and plastic collars.

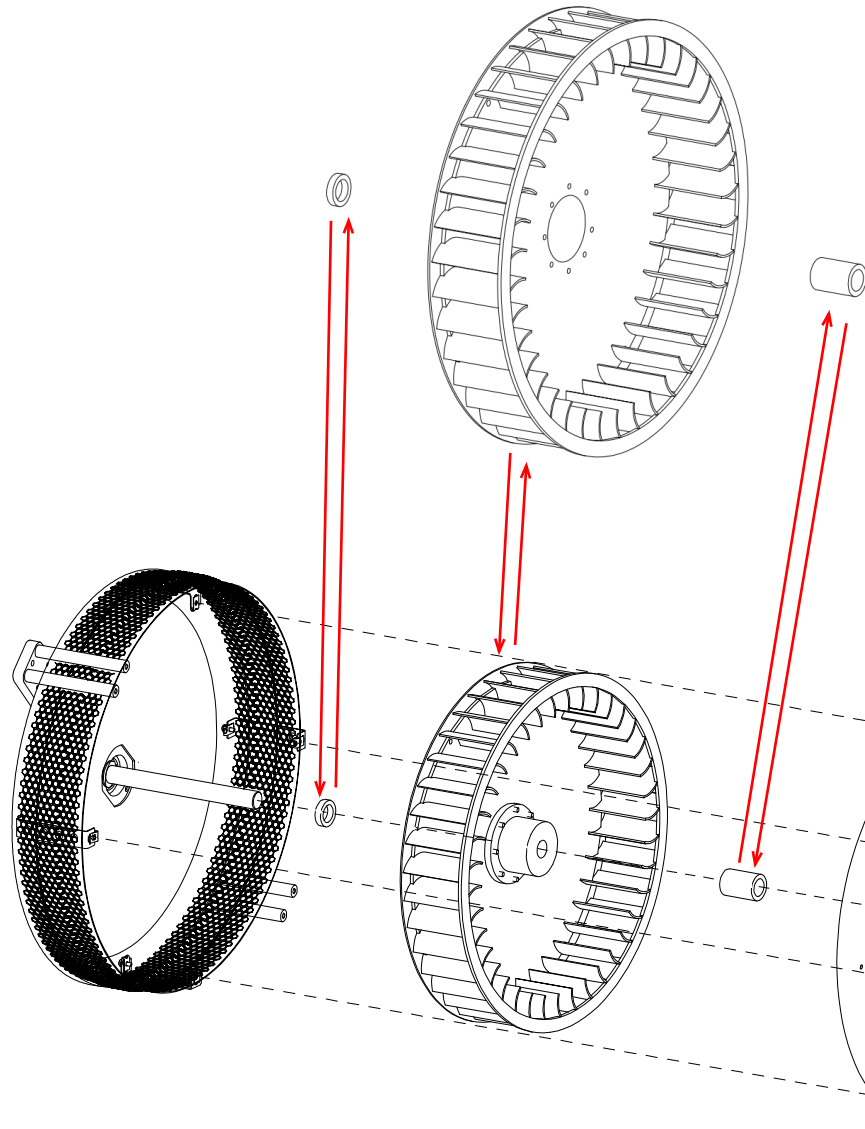


Step 1. Remove the screws on the side without data cable.

Step 2. Remove the catch roller.

Step 3. Replace the internal and plastic collars.

Step 4. After the replacement is completed, install in reverse according to the disassembly steps.

Step 1. Remove the screws on the side without data cable.

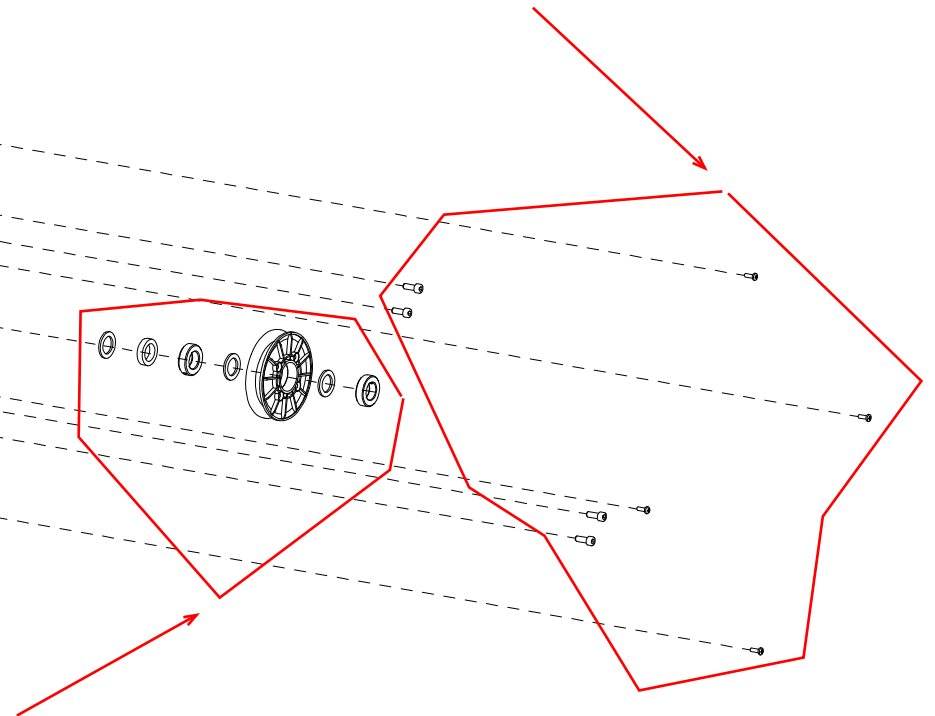

Step 2. Remove the catch roller.