



Catch Roller Trouble-shooting.

! Please remember the higher the usage of ergometers the greater the adherence to the maintenance protocol that is required!

If you experience slippage of a Catch Roller here are some trouble shooting procedures that you can follow:

- A. Clean oil from axel using acetone. Remove the Catch roller to do this and re-instate once the axel is cleaned.
- B. Inside the Flywheel surround there is a Grub screw that locates the axel to the flywheel blade arrangement. This grub screw is located on the axel and ensures the axel surround and blades are in full contact with the axel.

Enter the flywheel surround and make sure this is tight.

- C. If all the above suggestions have not made a positive impact, then you will likely need to replace the Catch Roller.

Our replacement parts portal is here: <https://www.kayakpro.com/parts>



OFFICIAL SUPPLIER OF ERGOMETERS
TO THE OLYMPIC GAMES



SUPPLIER OF ERGOMETERS TO NASA
LYNDON B. JOHNSON SPACE CENTER | HOUSTON, TEXAS