



T bolts Manual



Step 1: Fit the T bolts on the factory bar .

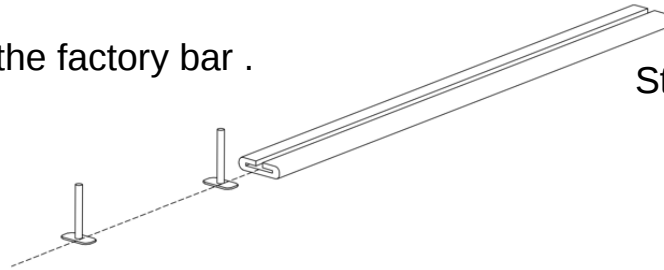

Step 2: Keep the distance between the T-bolts at 5cm.

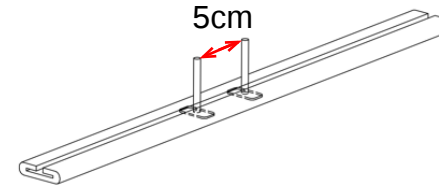

Step 3: Align the cross bar, washer, spring washer, and nut with the T-bolt in order, and then tighten them.

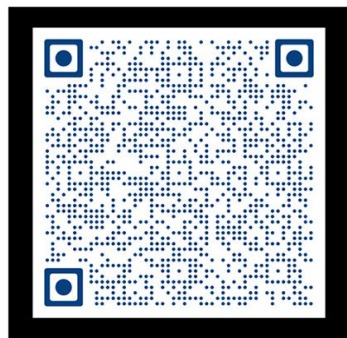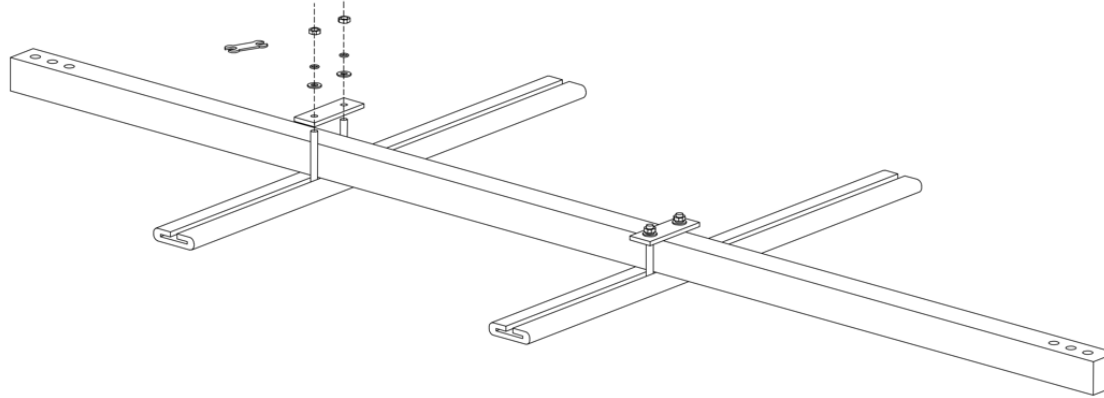

SUBSCRIBE TO OUR
KAYAKPRO
HD PADDLING VIDEOS

EZ-Vee[®]
Roof Rack System by **KAYAKPRO**[®]



📍 1344 Van Buren St., Hollywood Florida 33019. 🌐 www.kayakpro.com